## Hose Type 25/2W

ID25 - Series: T

## **Applications**

**Hydraulics:** Pressure test equipment (valves, tooling and control

panels), hydraulic tools (instrumentation packages for gauges, control of service equipment, hydraulic jacks,

hydraulic tools)

Oil and Gas: Grease injection, control of subsea hydraulic

components, nitrogen service, Gaseous media handling

## **Technical Information**

Inner Core: Polyamide (PA)

**Pressure Support:** 2 open layers, 2 dense layers of high-tensile steel wire

Outer Cover: Polyurethane (PUR)

Colour: Black

**Temperature:**  $-30^{\circ}\text{C to } +60^{\circ}\text{C } [-22^{\circ}\text{F to } 140^{\circ}\text{F}]$ 



			Dimensions (mm)			Sleeve	
Part no.	Thread	Material	Α	В	С	암	Sieeve
Sleeve							
12530111W	-	Steel	44	74,5	-	-	
							<

	Dimensions (mm)							Insert	
Part no.	Thread	Material	Nut	Α	В	С	암		IIISEI C
Male fitting									
32530411T	I"xII I/2NPTF	Steel	-	16,5	120	25	36	F 2	
32530415T	I"xII I/2NPTF	AISI 316Ti	-	16,5	120	25	36	4	





## Hose Type 25/2W

ID25 - Series: T



						ns (mm)		Insert
Part no.	Thread	Material	Nut	A	В	С	암	50.0
Female swive	el with O-Ring							
2253020IT	M42x2	Steel	52520201	16,5	5 110	0 -	50	\gamma
								0-Ring

Part no.	Thread	Material	Relief bores	Dime A	ensions B	(mm) C	암	Swivel nut
Swivel nut								
52520201	M42x2	Steel	l radial	30,2	34	22	50	

Part no.	Mesh length (mm)	Overall length (mm)	Breaking strength (kN)	Suitable for SPIR STAR® hose outer diameter (mm)	Hose securing grip
Hose secui	ing grip shor	t version			
9204400	600,00	820,00	35,10	30-40	

Production-related variations of the burst pressure of up to 5 % are possible. Other colours upon request.

The safety factors between the burst pressure and the working pressure as well as the test pressure depend on the operating conditions. For gaseous media the outer cover is to be pinpricked. Regarding the safety factor for gaseous media please contact your local SPIR STAR® assembling center.

The indicated working pressure refers to the hose only. Depending on the used fitting the permitted working pressure of a hose assembly may be less.

\*) Blast-Pro® fittings may only be used for tube cleaning operations inside the tube. They have not been designed for the use outside of tubes.

We reserve our rights for technical changes without notice. Subject to printing errors.

